




# Leapfrog My Own Leaptop Keyboard Buttons Replacement Guide

Access, cleaning and replacement of keyboard buttons.

Written By: Jonathan Fitzer

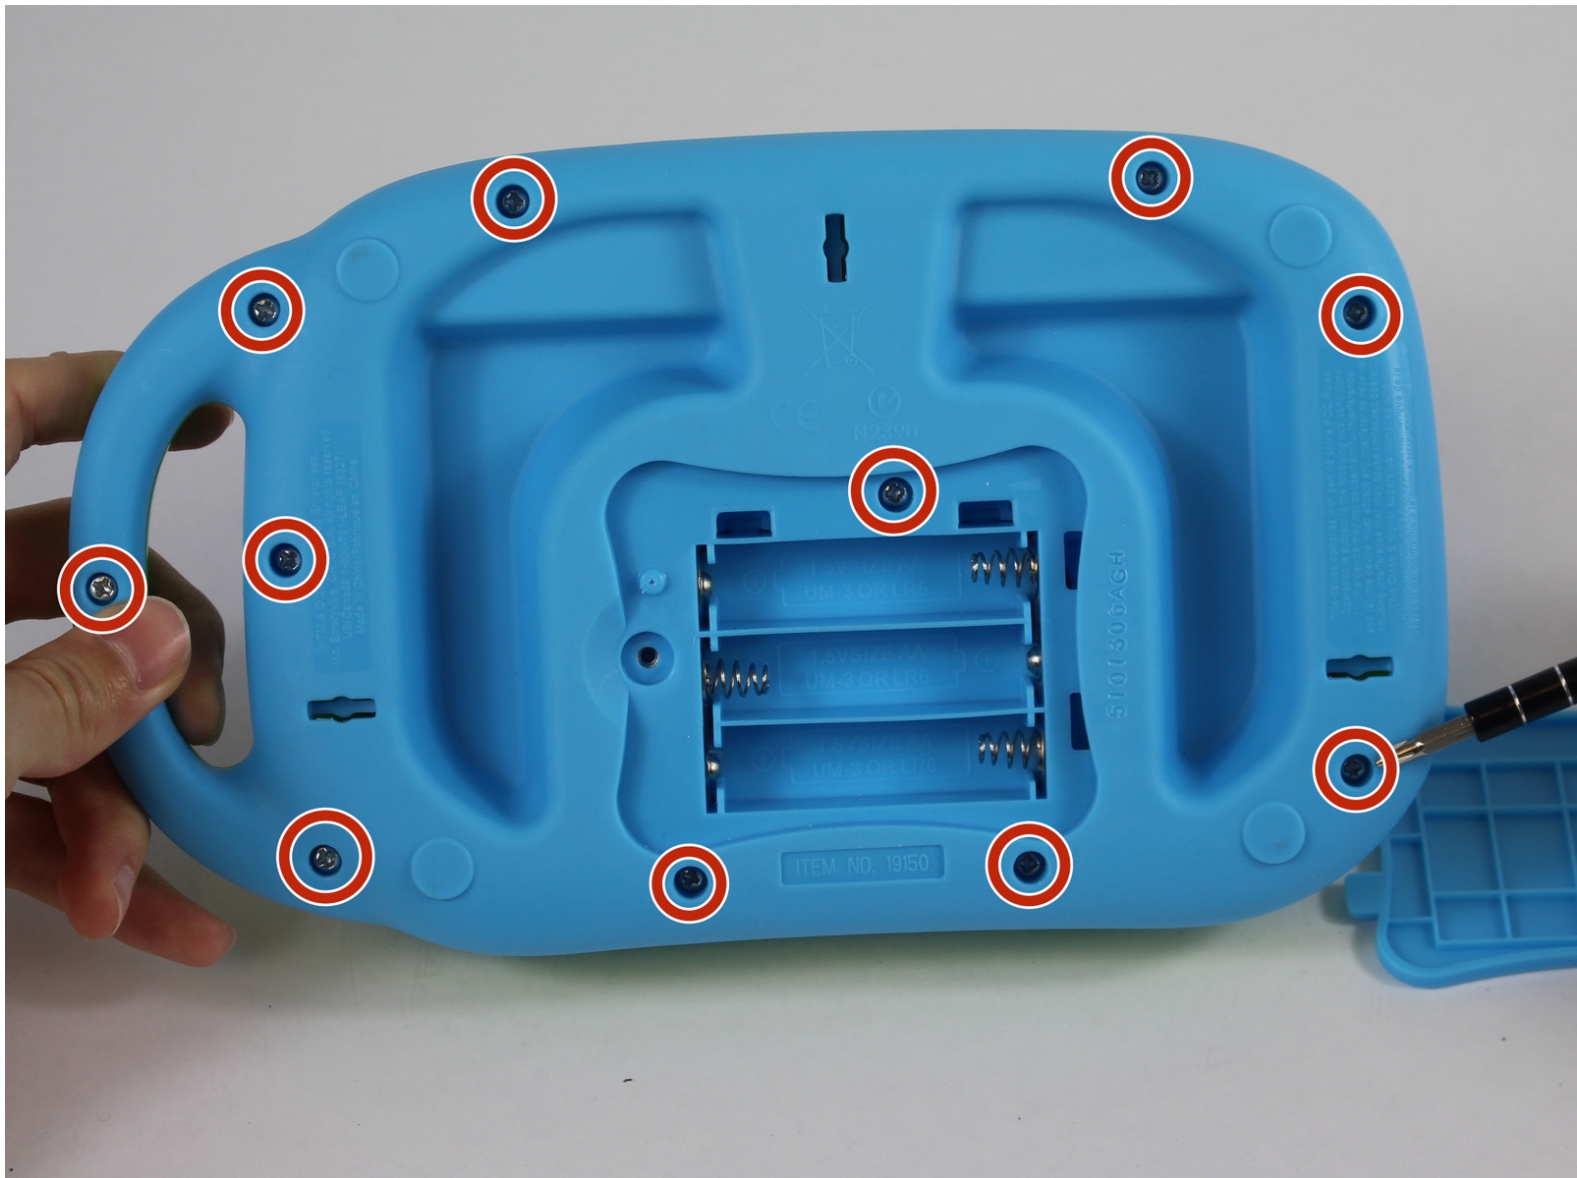

## INTRODUCTION

The step by step guide is designed to assist with button replacement of the Leapfrog My Own Leaptop.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Plastic Opening Tool](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Flip over device so that back portion of the device is facing you.



## Step 2



- Unscrew the one 10mm screw that holds the battery cover in place with a a PH1 phillips head screwdriver.
- ☑ Please note that the screw cannot be removed as it is attached to the battery cover.




### Step 3

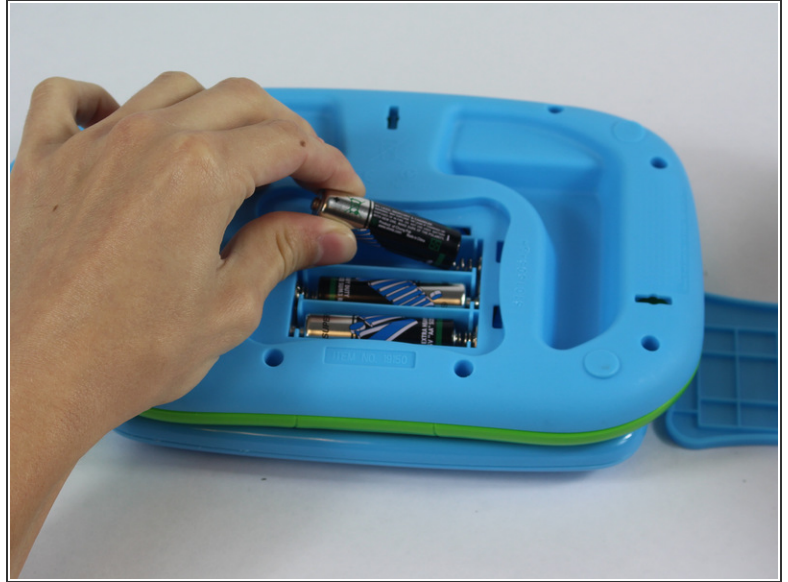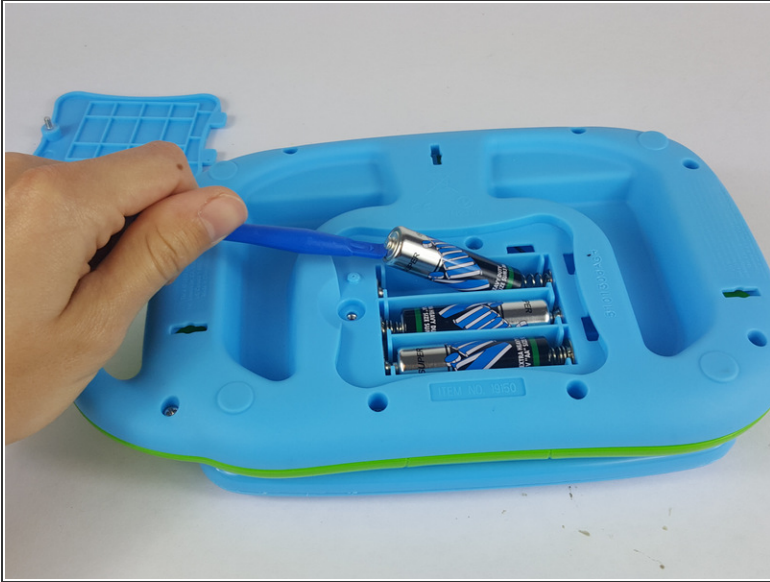


- Carefully pry the batteries out with a plastic opening tool prying from the non spring side.
- Remove the three AA batteries.
- *i* Note the direction of the batteries for when reassembling.

### Step 4 — Keyboard Buttons

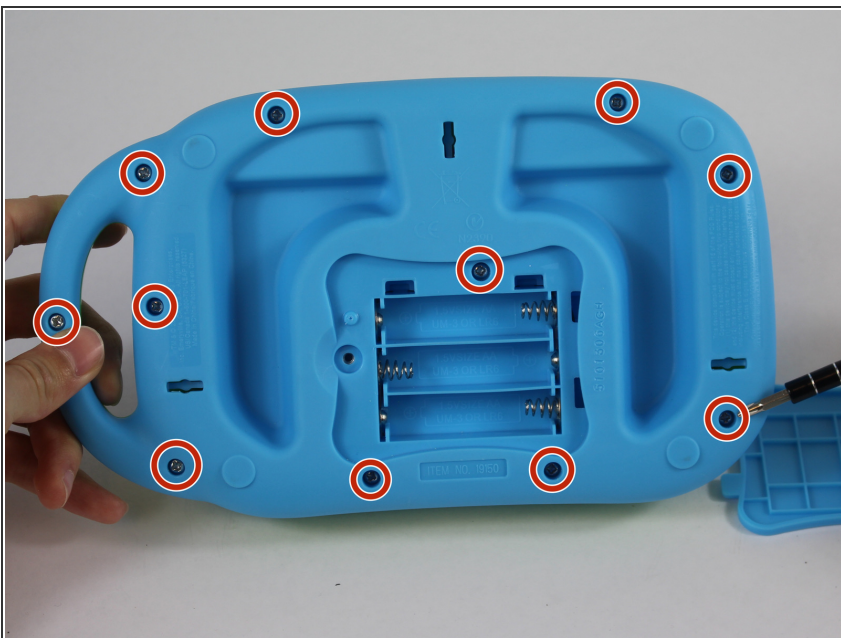

- Remove the eleven 10mm screws from the back of the device with a a PH1 phillips head screwdriver.



## Step 5

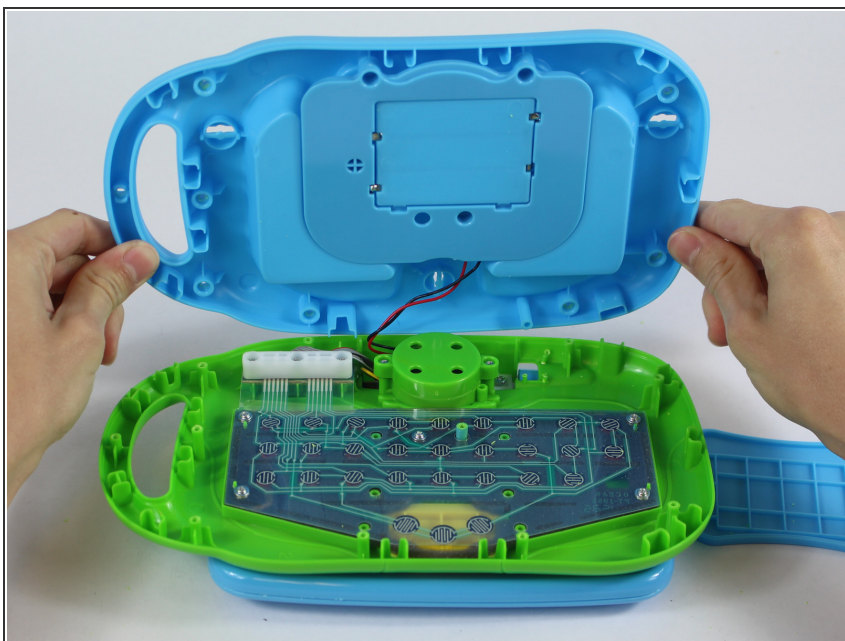

- Carefully remove back of the device.

⚠ Make sure not to rip the wires when lifting the cover off.

## Step 6

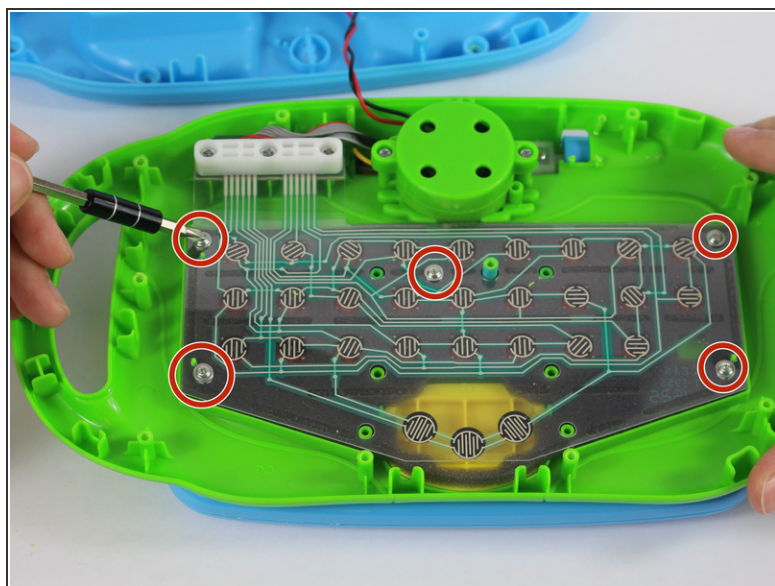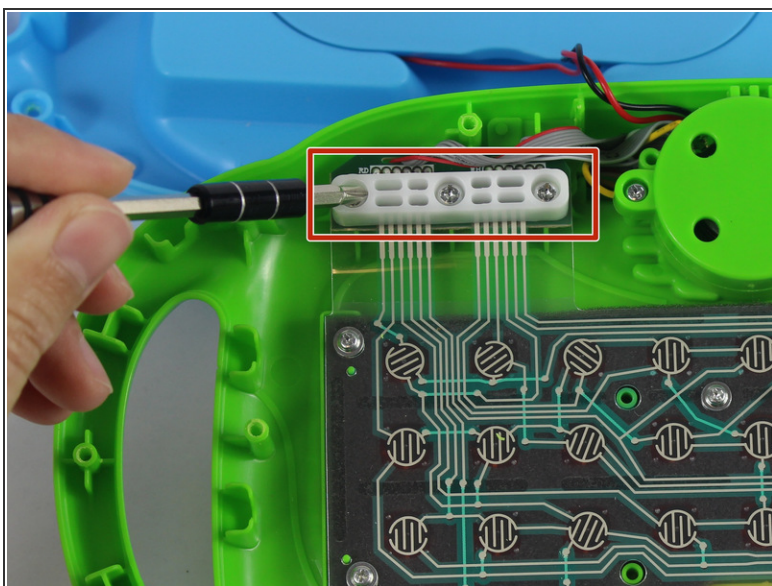

- Remove the three 10mm screws from the upper left hand corner white plastic piece with a PH1 phillips head screwdriver.
- Unscrew the five 4mm screws from the plastic membrane with a PH1 phillips head screwdriver.






## Step 7




- Remove the white plastic piece and place it to the side.

## Step 8

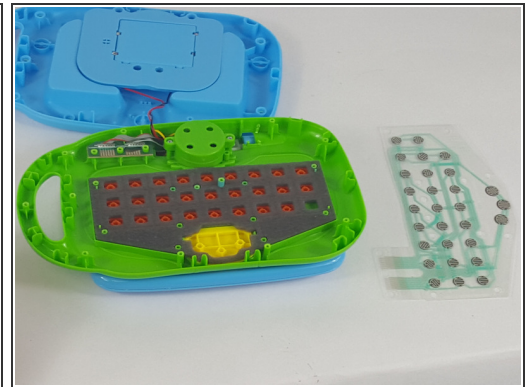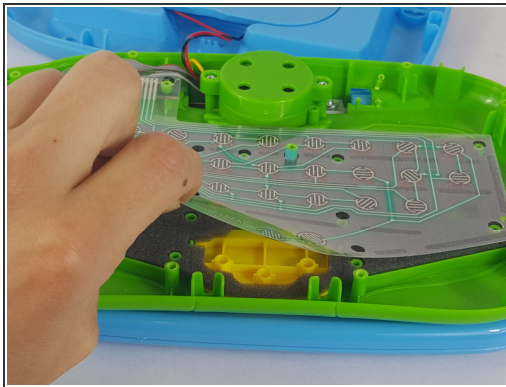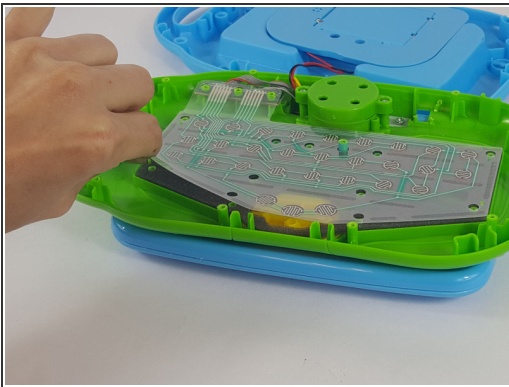


- Gently grab the membrane and peel it upwards.
- Carefully remove the membrane and set it to the side.
- From this step you can also clean the membrane of any residue with a lightly dampened paper towel.
- Ensure that the membrane is completely dry before reassembly.

## Step 9

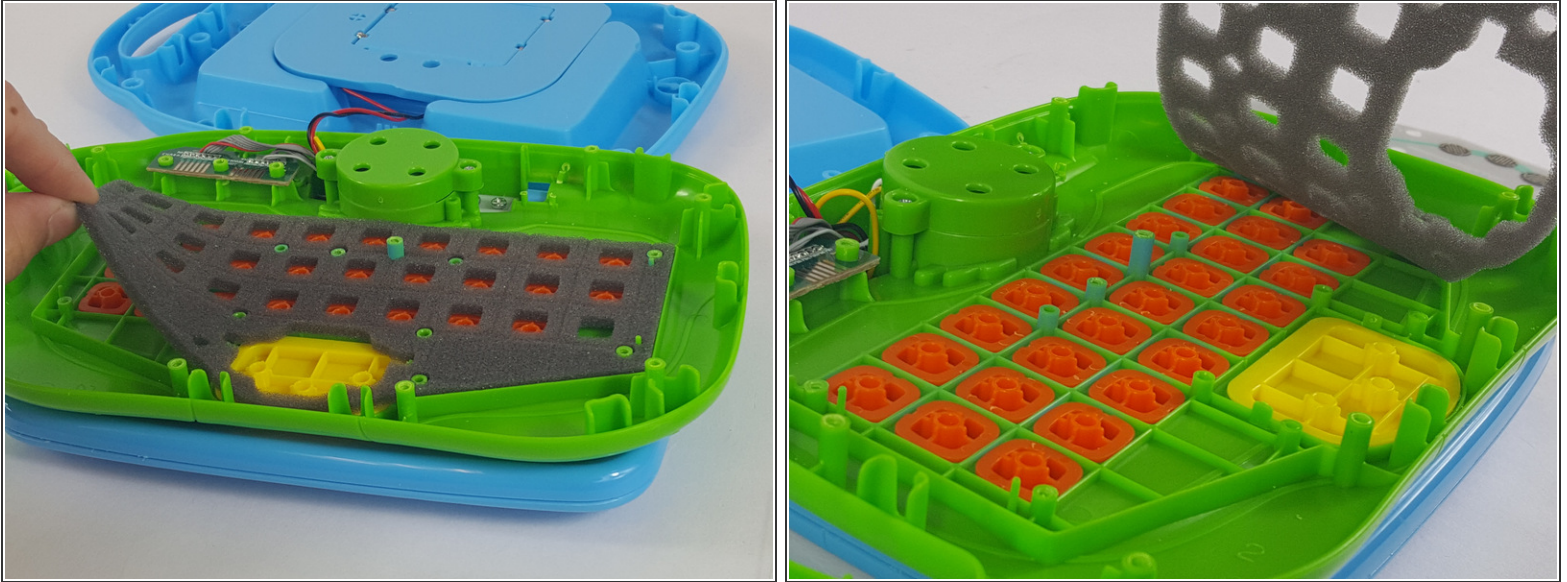

- Gently lift and remove the foam piece

## Step 10

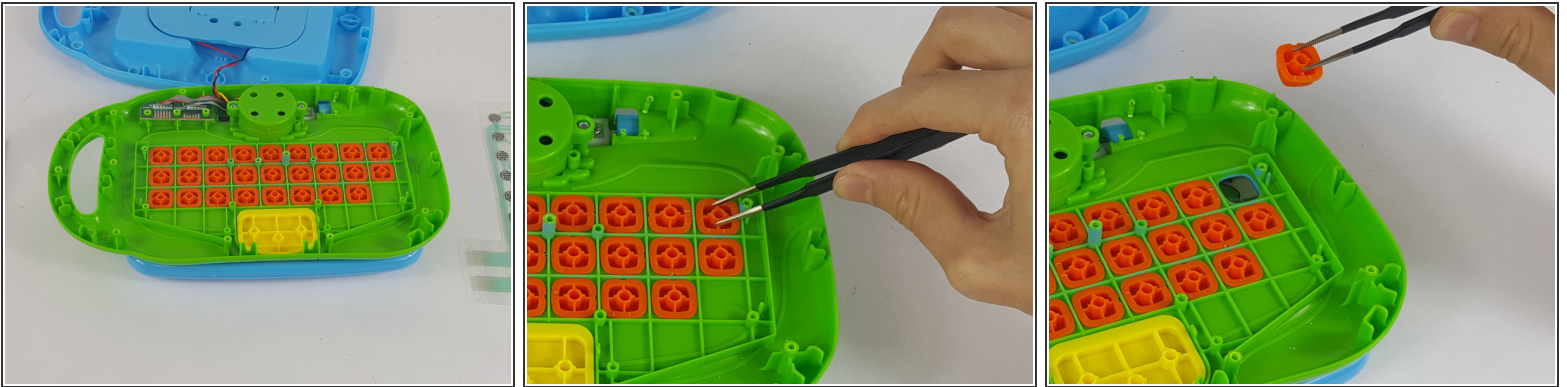

- From here, each button is able to be removed for cleaning or replacement.
- Using a tweezers or needle nose pliers, remove the necessary pieces from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 08:56:12 PM.